 




user manual
manual de usuario

DTA800

www.1800customersupport.com/RCA

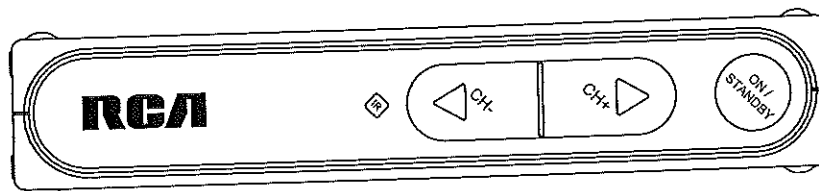

It is important to read this instruction book prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su equipo.

DTA800-B

FCC information



RCA
DTA800B

Equipment tested for
compliance as a
complete unit

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

 
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ventilation

You must adequately ventilate the product. Make sure there is adequate space around the unit to provide proper air flow for ventilation. See diagram.

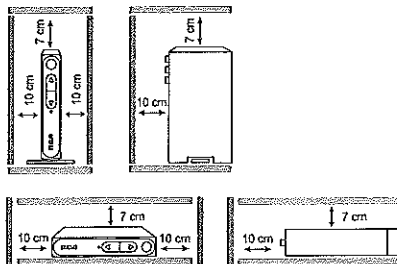


This converter box has earned the
ENERGY STAR.



This symbol indicates that this product incorporates double insulation between the hazardous mains voltage and user accessible parts.

For your safety

 The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



Removing the power plug is the only way to completely remove power from your product. Make sure the power plug remains easily accessible.

For your records

Keep your sales receipt for proof of purchase to obtain warranty parts and service. In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Date of Purchase :

Place of Purchase :

Serial No. :

Important battery precautions

Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.

- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Do not expose batteries to excessive heat (for example, by leaving them in sunlight or close to fire).
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Important safety instructions

Please read and save for future reference

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.





Portable Cart Warning

- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- Where the main plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

If your product operates on batteries

Adhere to the following precautions:

- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
- Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.

 THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

Additional safety information

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.


WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Contents

Box contents	4	Closed captioning on the Converter Box	8
Setting up	4	Advantages of closed captioning on the Converter Box	
Step 1: Installation		Menu settings	9
Step 2: Connections		More information	12
Step 3: Program the remote control		Troubleshooting tips	
Step 4: Initial setup of the Converter Box		Customer service and technical support	
General controls.....	7	Technical specifications	

Box contents

 
The following items are included:




RCA Digital TV Converter Box



 
RF coaxial cable

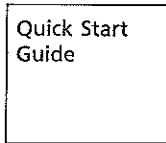


Quick Start
Guide

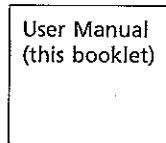 

User Manual
(this booklet)

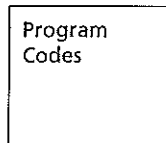 

Program
Codes

 


Remote control
(with 2 "AAA" batteries)


Setting up

Step 1: Installation

 The Converter Box can be installed either horizontally or vertically. The left side of the Converter Box can be rotated as a stand for vertical installation.




Horizontal installation

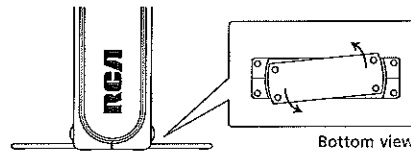 

Vertical installation


Step 2: Connections

 Option 1: Your TV has an antenna jack only

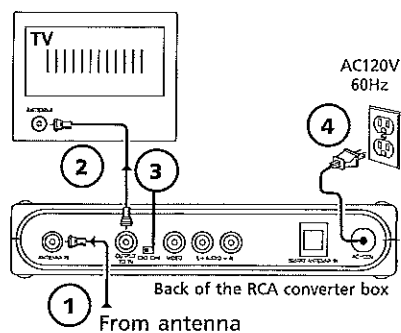

- 1 Connect your existing antenna cable to the ANTENNA IN jack of the Converter Box.
- 2 Connect the RF coaxial cable (supplied) from the OUTPUT TO TV jack of the Converter Box to the ANTENNA jack of the TV set.
- 3 Slide the CH3/CH4 selector on the back of the Converter Box to the channel that is not in use in your area. The Converter Box will send its video signal to Channel 3 or 4 on your TV.
- 4 Connect the AC power cable of the Converter Box to a suitable wall outlet.

 Option 2: Your TV has Audio/Video jacks (red, white & yellow connectors)

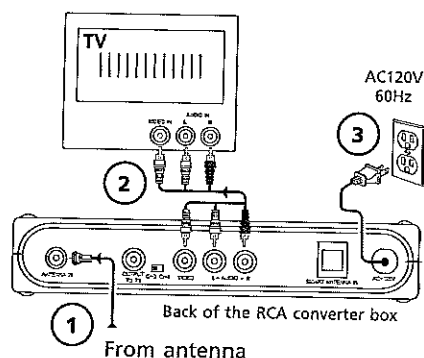


1 Connect your existing antenna cable to the ANTENNA IN jack of the Converter Box.

2 Connect the Audio/Video cables (not supplied) from the Audio/Video OUT jacks (yellow, white, red) of the Converter Box to the Audio/Video IN jacks on the TV set.

If there are more than two sets of Audio/Video jacks on the TV set, connect only either AV1 or AV2 input jacks to those of the Converter Box.

3 Connect the AC power cable of the Converter Box to a suitable wall outlet.

 Option 3: You also need to connect your VCR

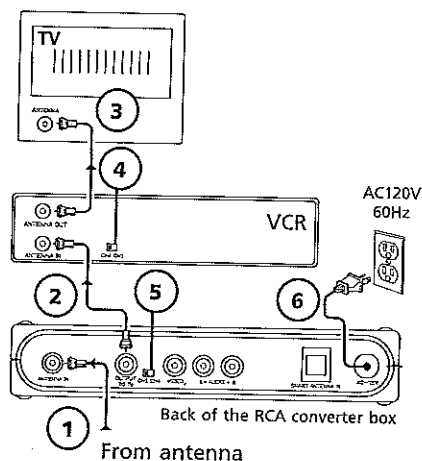

1 Connect your existing antenna cable to the ANTENNA IN jack of the Converter Box.

2 Connect the RF coaxial cable* (supplied) from the OUTPUT TO TV jack of the Converter Box to the ANTENNA IN jack of the VCR.

3 Connect an RF coaxial cable* (not supplied) from the ANTENNA OUT jack of the VCR to the ANTENNA IN jack of the TV set.

4 Slide the CH3/CH4 selector on the back of the VCR to the channel that is not in use in your area. The VCR will send its video signal to Channel 3 or 4 on your TV.

5 Slide the CH3/CH4 selector on the back of the Converter Box to the channel that the VCR is not using; e.g., if you set the VCR selector to CH3, slide the Converter Box selector to CH4.

6 Connect the AC power cable of the Converter Box to a suitable wall outlet.

The SMART ANTENNA IN jacks let you connect a Smart Antenna. Refer to the antenna's user manual for proper connection.

* You can also use Audio/Video cables (similar to option 2) if the connection jacks are available on the VCR and TV.

Setting up

Step 3: Program the supplied remote control

 
You can control TV sets of all major brands after programming the Converter Box remote control with the PGM key. RCA TV sets can be controlled directly without programming. Refer to the steps below and the separate Program Code leaflet to guide you through the programming.

1. Refer to the separate Program Code leaflet. Look for the brand of your TV set and a 3-digit program code next to it. There may be more than one program code available. Choose any one of them.


Program codes/Códigos de programa

Admiral 002, 128, 183, 189
Advent 191, 258, 260, 275
Aventura 129


- If your TV set is not on the list, skip the rest of Step 3 and go to "Step 4: Initial setup of the Converter Box".
- 2. Press **PGM** on the remote control. The signal indicator on it remains lit.



 3. Enter the 3-digit program code with the number keys. Press **OK** for confirmation. The signal indicator will be off when the program is done.

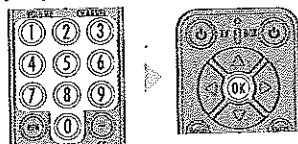

 4. Press the volume keys on this remote control to check if they can adjust the volume of your TV set.



- If you fail to control your TV set, repeat steps 2 to 4 to program again. Try another program code if there is more than one for your TV brand.
- If the signal indicator remains lit after blinking four times, you may have entered the wrong code. Repeat steps 3 to 4 to program again. Make sure you have correctly entered the code.

- You can still use your TV remote control to turn on your TV set, select input source and control the volume.

Step 4: Initial setup of the Converter Box

1. Press **BOX** on the remote control to turn on the Converter Box.



 
2. Press **TV** (or use the TV remote control) to turn on the TV set.



3. Press **INPUT** up to four times (or use the TV remote control) to select the channel on your TV set to view images from the converter box.




- The following screen will appear on your TV when the correct channel is chosen.

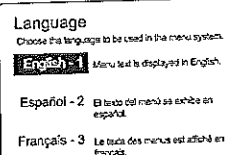

- If you cannot see the above screen on your TV set, check that:
 - 1) if the converter box has been turned on,
 - 2) if you have programmed the remote control so that the TV input channel can be selected correctly,
 - 3) if you have correctly connected the TV set with the Converter Box.
- 4. Press **1** (for English), **2** (for Spanish) or **3** (for French) to select the menu language.



 5. Press **1** to start automatic channel search.



- To improve TV signal reception, an optional Smart Antenna which is compatible for connection with the Converter Box is recommended.

DTA800-B

- If a Smart Antenna is connected, press **1** for Quick Scan or **2** for Full Scan. A full scan with Smart Antenna may take around 40-50 minutes.
- When the scan finishes, the Channel List menu displays the found channels.
- Reposition the antenna and perform the automatic channel scan again if you cannot find all available channels.


- The Channel List shows after scanning, press **▲** or **▼** to highlight a channel and press **OK** to start viewing.

Channel List			
Channel		What's on Now	What's on Next
2-1 KTVU	Stored	Current program	Next program
2-2 KTVU	Stored	Current program	Next program
4-1 KRON	Stored	Current program	Next program

- You may also hide unwanted channels, refer to "Channel List" on page 9 for details.

General controls

 - The keys on the Converter Box remote control are divided into two parts. The keys shown in white in the diagram below control the Converter Box, while the grey keys control your TV set.
- You can control TV sets of all major brands after programming this remote control with the PGM key. RCA TV sets can be controlled directly without programming. Refer to "Step 3: Program the remote control" in the "Setting Up" section for details.

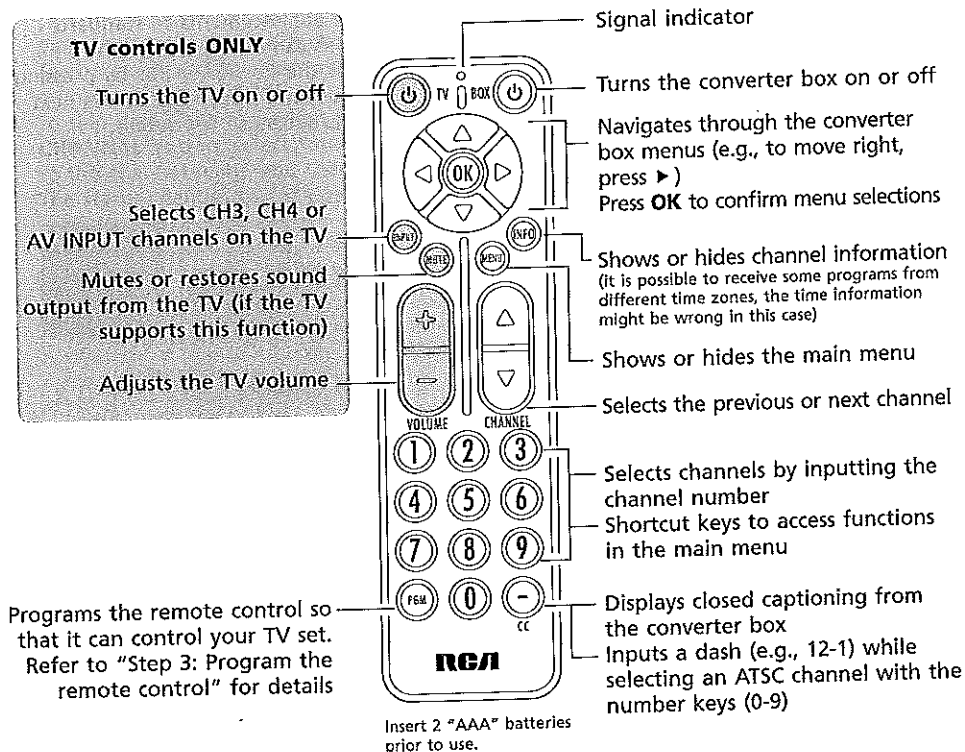

Closed captioning on the Converter Box

Closed captions allow people who are deaf or hard of hearing to enjoy TV programming. Captions are also a helpful tool for those learning English or watching TV in a noisy environment.

The Converter Box provides two ways for you to view captions. You should choose one method or the other.

Method 1

First, you can continue receiving standard TV captions (basic white text on a black background) through your analog TV set. The Converter Box will automatically send the closed-captioning information to your television for the TV to decode and display. All you need to do is turn on the closed captioning function on your TV as you always have (if your TV has this capability, as newer TV sets do.)

Method 2

Alternatively, the Converter Box can be used to decode captions and display them on your TV screen. If you use this method, you will be able to enjoy the enhancements made possible by digital technology. To use the converter box to display closed captions:

1. Turn OFF your television's closed-caption decoder.
 2. Turn on the Converter Box's captioning decoder by pressing the **CC** button at the lower right-hand side of the remote control.
- When you use the converter box to display closed captions in this way, you can choose different types (languages) of captions, depending on what information broadcasters are sending.



Advantages of closed captioning on the Converter Box

 
Using the Converter Box to decode captions gives you more choices and more flexibility when viewing captions on digital TV shows. If you choose this method, you can personalize your captions by making the following choices:

- Choose text size for standard, large, and small-sized captions
- Select different types of fonts
- Choose between eight background colors and foreground colors for the captioning text (white, black, red, green, blue, yellow, magenta, and cyan)
- Make the caption background transparent, translucent, solid, or flashing
- Set edges of font characters with raised edges, depressed edges, uniform edges, left shadow or right shadow

Each of these enhancements to standard digital captions can be accessed from the main menu of the Converter Box by pressing the **MENU** button. Please refer to the next section "Menu settings" for details.

Menu settings

The main menu lets you access more features of the converter box. Press **MENU** to show or hide the menu. When the menu is displayed, press the number keys on the remote control to access the corresponding menu item directly.

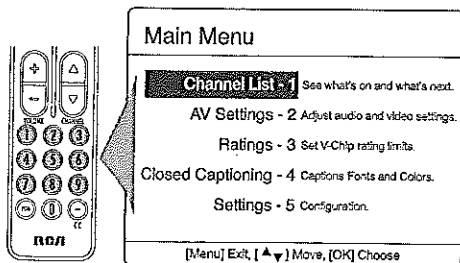


Shortcut keys


① Shortcut key

Channel List

 - Lists the available TV channels and the programs playing on each channel.
- To change channels, select a channel number and press **OK**.
- To skip past a channel when pressing the **CHANNEL** button, select "Stored" next to the channel name and then press **OK**. The status changes to "Skipped".

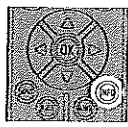

Channel	What's on Now	What's on Next
2-1 KTVU Stored	Current program	Next program
2-2 KTVU Stored	Current program	Next program
4-1 KRON Stored	Current program	Next program

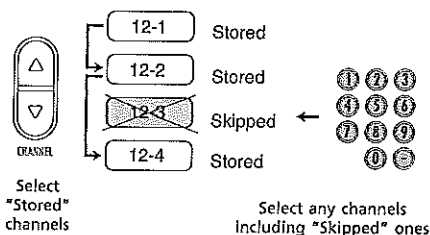 

② Shortcut key

 
AV Settings

- Change the video display and sound output formats.
- Press **1** for *Picture* or **2** for *Audio Controls*.
 - Picture*: Press **1** for *Widescreen* or **2** for *Fullscreen*.
 - Audio Controls*: Press **1** for *Stereo*, or **2** for *Alternate Audio* (for bilingual programs). When *Alternate Audio* is selected, press **OK** on the remote control to switch between main and alternate languages while watching TV.

③ Shortcut key

Ratings


- This feature enables you to restrict access to certain TV programs whose content may be deemed unsuitable for your children. Viewing is restricted unless the password (initial default password: 0000) that you have chosen is entered. Password is also required before entering the rating menu.
- Three sub-menus are available:

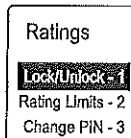





Ratings	
Lock/Unlock - 1	Turn ON/OFF rating enforcement
Rating Limits - 2	Set rating limits
Change PIN - 3	Change password number

 - Press **1** for *Lock/Unlock*: to activate or deactivate the rating feature.
 - Lock/Unlock*: Press **1** to select *OFF* (to deactivate the rating feature, even if you have defined certain settings in the *Rating Limits* menu) or press **2** to select *ON* (to activate the rating feature) or press **3** to select *ON/Enable* (to activate the rating feature and enable downloadable ratings).

- Press **2** for *Rating Limits*



- ☐ TV-Y
☐ TV-Y7
☐ TV-G
☐ TV-PG ☐ D ☐ L ☐ S ☐ V
☒ TV-14 ☐ D ☐ L ☐ S ☐ V
☒ TV-MA ☐ L ☐ S ☐ V

- ☐ G-1
 PG-2
 PG-13-3
 R-4
 NC-17-5

- Press **3** for *Change PIN*
- To change the password for ratings.
- The initial default password is "0000", you must change it and create your own password to activate the rating settings.

- following Age and Content-based Guidelines.
- **TV-Y** (All Children – This program is designed to be appropriate for all children.)
- **TV-Y7** (Directed to Older Children – This program is designed for children age 7 and above.) The program may contain fantasy violence (FV).
- **TV-G** (General Audience – Most parents would find this program suitable for all ages.)
- **TV-PG** (Parental Guidance Suggested – This program contains material that parents may find unsuitable for younger children.) The program may contain one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).
- **TV-14** (Parents Strongly Cautioned – This program contains some material that many parents would find unsuitable for children under 14 years of age.) Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).
- **TV-MA** (Mature Audience Only – This program is designed to be viewed by adults and therefore may be unsuitable for children under 17.) This program contains one or more of the following: graphic violence (V), explicit sexual activity (S), or crude indecent language (L).

Some programmers use the **Movie Ratings (MPAA) System** to rate TV shows on the same scale as motion pictures:

- A **G**-rated motion picture contains nothing in theme, language, nudity, sex, violence or other matters that would offend parents whose younger children view the motion picture.
- A **PG**-rated motion picture should be investigated by parents before they let younger children attend.
- A **PG-13** rating is a sterner warning to parents to determine whether their children under age 13 should view the motion picture, as some material might not be suited for them.
- An **R**-rated motion picture contains some adult material.
- An **NC-17** rated motion picture is one that most parents would consider too adult for their children.

For more information about TV ratings, visit: www.PauseParentPlay.org



Shortcut key

Closed Captioning

- Lets you change the closed caption appearance (size, font, text color, text opacity, background color, background, edge effect and edge color).
- Press **1** (Font Options) to change font size, color and effects, **2** (Back Options) to change background size, color and effects or **3** (Default) to reset to default settings.
- Only digital closed captions can be changed.
- For more information, see "Advantages of closed captioning on the Converter Box".



Shortcut key

Settings

- Five sub-menus are available:

Settings

- Channel Scan - 1** Search for valid channels.
- Language - 2** Select language used in menu.
- Power Saver - 3** Turns off power automatically.
- Antenna - 4** Signal strength meter.
- System Reset - 5** Return system to factory settings.

- Press **1** for *Channel Scan*
 - To start automatic channel scan.
- Press **2** for *Language*
 - To select the menu language.
- Press **3** for *Power Saver*
 - An energy saving feature to turn off the converter box automatically after 4 (default), 8 or 12 hours according to your selection. Select OFF to de-activate this feature.
 - The timer is only active when the converter box remains idle (i.e. no key activation). Once any "Box" key is pressed, the timer will be reset.
 - If you have set up timer recordings for TV programs, make sure the converter box will not turn off automatically before the recordings finish.
- Press **4** for *Antenna*
 - To show the signal strength for receiving broadcast from a TV station. If signal is weak, you may need to reposition the antenna.
- Press **5** for *System Reset*
 - To restore all settings to factory defaults.

More information

Troubleshooting tips

Unit does not work.

- Unplug the AC power cord and plug it back in.

No picture on the TV screen.

- Make sure the converter box is turned on.
- Make sure the connections between the converter box and TV are properly done.
- Choose different channels or video inputs on the TV set until the picture appears.

No sound.

- Make sure the connections between the converter box and TV are properly done.
- Make sure the TV sound is not muted.

Remote control does not work.

- Make sure the batteries are inserted correctly.
- Replace the batteries if they are exhausted.
- Remove any obstacles between the remote control and the converter box.
- If the remote control works with the converter box but does not work with your TV, reprogram the remote control, following the steps in "Program the remote control".

Cannot watch a bilingual TV program in its secondary language.

- Make sure you have correctly selected the audio settings. Refer to AV settings in the main menu.

Forgot password.

- Choose "Ratings" in the main menu and input the master password "3308". Create a new password. (The master password cannot be used to unlock programs for viewing.)

The Converter Box has turned off suddenly.

- Check if Auto Power Down Timer is activated in the main menu. It is set to 4 hours by default.

Weak signal or channel not available.

- Try to reposition the antenna. If the signal is still weak, a more powerful antenna may be required to boost reception for the Digital TV signal. A Smart Antenna is recommended.

The TV is newly changed to an RCA TV set and the remote control cannot control it.

- Reprogram the remote control, following the steps in "Program the remote control".

Smart Antenna is newly connected and channel scan is required.

- In the menu, press **5** for *Settings* and then press **1** for *Channel Scan*.

Customer service and technical support
www.1800customersupport.com/RCA

Technical specifications

Power supply: AC 120V/60Hz

Power consumption: <1W (standby)
<7W (operating, HD mode)

Remote reception distance: >8m from front

RF freq. range: 57MHz – 830MHz

RF channel range: CH2 – CH69

RF sensitivity: -83dBm to -5dBm

RF impedance 75 ohms

Output channel: CH3/CH4, selectable

Video system: NTSC

Video output: 1V peak-to-peak

Video output impedance: 75 ohms

Audio output impedance: 600 ohms

Unit size (L x W x H): 190 x 140 x 38mm

Net weight: 0.4kg



Dolby and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under License from Dolby Laboratories.

DTA800-B

Limited warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranty. This limited warranty extends to the original consumer purchaser and is limited to non-commercial use of the product.

EN

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at **AVC's** sole discretion.

During a period of one year from the effective warranty date, **AVC** will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1-866-444-5746 or 1-800-252-6123, during the hours listed in the box below.** The determination of service will be made by **AVC** Customer Support. **PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION.** New or remanufactured replacements for defective parts or products will be used for repairs by **AVC** at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the **AVC** service facility you must use the original carton box and packing material or an equivalent as designated by **AVC**.

LIMITED WARRANTY

Your Responsibility

- 1) You must retain the original sale receipt to provide proof of purchase.
- 2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- 3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of **AVC**, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-866-444-5746, 1-800-252-6123 or www.1800customersupport.com/RCA**

Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time.

Important:

You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall **AVC** be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **AVC** arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at
www.1800customersupport.com/RCA

Important:

Also keep your "Bill of Sale" as proof of purchase.

Model no. Product name
Type of set
Serial no. Invoice no.
Date purchased Dealer name

FOR SERVICE AND REPAIR, PLEASE VISIT **www.1800customersupport.com/RCA**

Specifications and external appearance are subject to change without notice.